


99-0520 / BP 50 S

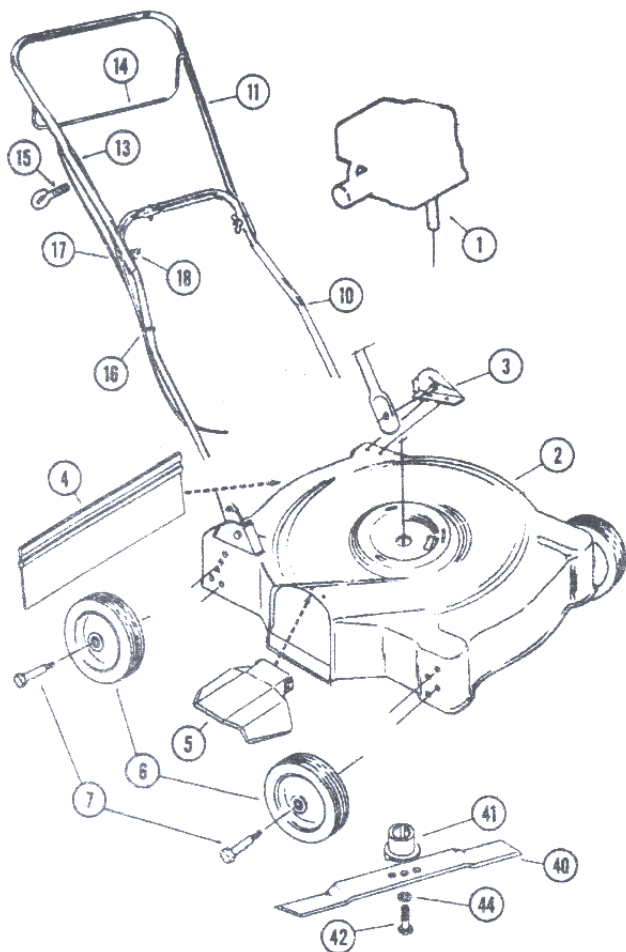

2 - 5602210	Klipperskjold 20"
3 - 2208	Beslag venstre
- 2209	Beslag højre
4 - 2368	Skærm
5 - 2335	Udkastertud
6 - 5702621	6" hjul (orange)
7 - 431	Bolt
10 - 5602562	Understyr
11 - 5602563	Overstyr
13 - 2534	Stopkabel
14 - 2303	Koblings håndtag
15 - 5802497	Holder for startsnor
16 - 5702291	Kabelholder
17 - 1030	Bolt
18 - 2148	Vingemøtrik
40 - 2341	Kniv 20"
41 - 2515	Knivholder 20"
42 - 71	Knivbolt
44 - 117	Låseskive