



Spare Part List Electric Blower

Pos.	Art.-No. Ikra	Description	LS1600
1	74300001	Vaccum bag	
2	74300002	Vacuum elbow	
3	74300003	Blower nozzle tube	
4	74300004	Bending protector	
5	74300005	Cable and plug	
6	74300006	Nut	
7	74300007	Back-frame of the motor	
8	74300008	Rubber-ring	
9	74300009	Left enclosure	
10	74300010	Plate for maintain the brush-holder	
11	74300011	Plate of brus-holder	
12	74300012	Brush-holder	
13	74300013	Carbon-brush	
14	74300014	Stator	
15	74300015	Bearing	
16	74300016	Separating tube	
17	74300017	Rotor	
18	74300018	Bearing	
19	74300019	Front-frame of the motor	
20	74300020	Wing	
21	74300021	Screw	
22	74300022	Safety-switch	
23	74300023	Rubber-plate	
24	74300024	Housing-screw	
25	74300025	Cord anchorage - PCB	
26	74300026	X2 Capacitor	
27	74300027	Studboss	
28	74300028	Brush-spring	
29	74300029	Main switch	
30	74300030	Blower Tube	
31	74300031	right enclosing	
32	74300032	Protection guard	
33	74300033	String	
34	74300034	Upper vacuum tube	
35	74300035	Lower vacuum tube	
36	74300036	Spring washer	
37	74300037	Separating tube of the wing	
38	74300038	Screw	
39	74300039	Nut	
40	74300040	Terminal block	
41	74300041	Screw	