Rød - Dynamark

REPAIR PARTS MANUAL 36" - 11 H.P. RIDING MOWER

MODEL 3611-42

WARRANTY

ONE YEAR LIMITED WARRANTY

For one (1) year from date of purchase by the first consumer for residential use (thirty (30) days commercial use). Western International Incorporated warrants that it will replace free of charge, including labor, any original part of any Western International Incorporated product found to be defective by any authorized Service Dealer or the factory, except the battery which is warranted for ninety (90) days from date of purchase.

This warranty does not cover engine, transmission, transaxle or differential (these items are covered by their manufacturer's own warranty). This warranty does not cover parts that have failed due to normal wear or parts that have failed subject to misuse or abuse. Transportation of the unit or part to and from an authorized Service Dealer or the factory is the responsibility of the owner.

A step by step explanation as to what procedure should be followed for this Warranty is:

- If a part becomes defective, contact the store where the unit was purchased for the name and address of the authorized Service Dealer nearest to you.
- If you cannot locate an authorized Service Dealer, write Service Department of Western International Incorporated for the name and address of the authorized Service Dealer in your area or call the Service Department at 1-515-265-3461.
- Return the defective product, along with proof of purchase to such authorized Service Dealer for replacement of any defective part where covered by this warranty.

There is no other express warranty. Implied warranties, including those of merchantibility and fitness for a particular purpose are limited to one (1) year from date of purchase. Liability for incidental or consequential damages are excluded.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Western International Incorporated

P.O. Box 377

Des Moines, Iowa 50302

UNIT PARTS AND SERVICE

This manual contains instructions for safety, assembly and maintenance. Read this manual carefully and completely so that you will know proper assembly, use and care of your unit. Also fill in and mail the registration card packed with the unit. For service other than covered in this manual, contact an authorized service dealer. A nationwide parts and service organization has been established to provide locally available parts and service. A list of authorized parts distributors has been included in this manual. When ordering repair parts, always give the following information:


1. The Part Name;
2. The Part Number:
3. The Quantity desired;
4. The Full (eight digit) Model Number of the unit. The model number will be found on a plate attached to the unit.

Look for this symbol. It means - ATTENTION! BECOME ALERT! A HAZARD TO OPERATOR, BYSTANDERS, PROPERTY OR EQUIPMENT MAY EXIST.

WESTERN INTERNATIONAL INCORPORATED P.O. BOX 377 DES MOINES, IOWA 50302

Part No 301649

0688

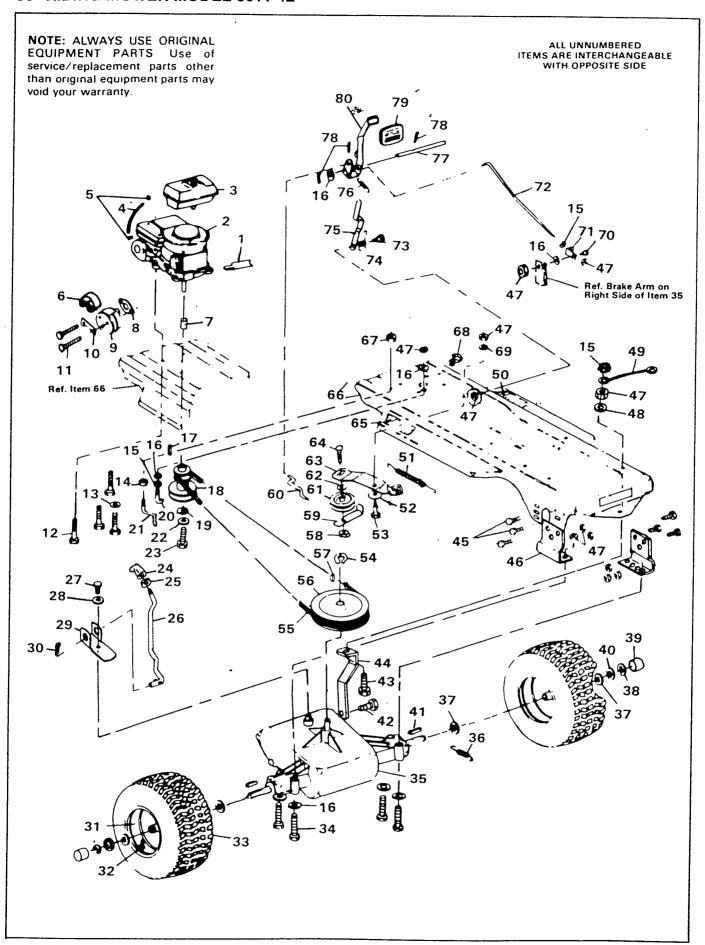

ALWAYS GIVE THE FOLLOWING INFORMATION WHEN ORDERING REPAIR PARTS: 1. The PART NUMBER; 2. The PART NAME; 3. QUANTITY DESIRED; 4. The MODEL NUMBER (As shown on Model Plate).

SEND PART ORDERS AS PER INSTRUCTIONS ON THE FRONT PAGE.

YOUR UNIT IS RIGHT HAND (RH) OR LEFT HAND(LH) AS YOUR STAND BEHIND IT.


DO NOT USE KEY NUMBERS WHEN ORDERING REPAIR PARTS, ALWAYS USE PART NUMBERS. All replacement parts will be supplied in current production colors or in a neutral color.

A handling fee is applicable to small parts orders.

Key No. 1 2 3 4 5	Part No. 54873 Engine 48812	Description Trough, Oil Drain	Key No.	Part No.	Description	
2 3 4 5 6	Engine	Trough, Oil Drain			Description	
2 3 4 5 6	Engine	Trough, Oil Drain 42			Screw, Hex Wa Tap, 5/16-18 x 3/4 In.	
3 4 5 6		~See Footnote Below	43	35498 122017	*Screw, Hex Hd, 5/16-18 x 1 In.	
4 5 6		Gas Tank	44	54713	Bracket, Stabilizer	
5 6	42258	Gas Line	45	120228	*Screw, Hex Hd, 5/16-18 x 5/8 in.	
	41008	Clip, Gas Line	46	53768	Bracket, Axle	
- 1	54767	Heat Shield, Muffler	47	9413447	Locknut, Hex 5/16-18 Thd.	
7	56430	Spacer	48	138485	Washer, Ext. Lock, 5/16 In.	
8		Gasket, Muffler (Engine Part)	49	55511	Ground Wire	
9 [54766	Muffler	50	54618	Foot Pad, R.H.	
10		Engine Part	51	49276	Spirng, Main Drive	
11	173063	*Screw, Hex Hd, 5/16-18 x 3-1/2 ln.	52	4107	Washer, 5/8 In.	
12	50947	Screw, Hex Wa Tap, 3/8-16 x 1-1/4 in.	53	41890	Shoulder Bolt	
13	138489	Washer, Star	54	22053	Retaining Ring	
14	271190	Nut, Hex, Keps, 3/8-16 Thd.	55	54758	V Belt	
15	271184	Nut, Hex, Keps, 5/16-18 Thd.	56	55520	Pulley, Transaxle	
16	120393	*Flatwasher, 11/32 In.	57	3021	Key, Woodruff, No. 606	
17	56432	Key, Engine Pulley 58 9413534		Locknut, Hex, 3/8-16 Thd.		
18	56433	Pulley, Engine	59	39659	Belt Retainer	
19	56431	Washer, Pilot	60	43980	Rod, Clutch	
20	49896	Belt Guide, Transm, Drive Belt	61	35374	Pulley, Idler	
21	50653	Belt Guide, Blade Drive	62	274517	*Flatwasher, 13/32 In.	
22	120383	*Lockwasher, Split, 7/16 In.	63	53762	Idler Arm	
23	181682			Carriage Bolt, 3/8-16 x 1-1/2 In.		
24	58284			Foot Pad, L.H.		
25	120238	Jam Nut, 1/2-13 Thd.	66	56570	Main Frame	
26	55526	Shift Lever	67	41529	Locknut, 3/8-16 Thd.	
27	56255	Screw, Nylock, 1/4-28 x 3/4 ln.	68	54888	Retainer, Wire	
28	57157	Washer	69	45602	Flatwasher, 21/64 In.	
29	56256	Shift Bracket	70	20507	Shoulder Bolt	
30	137185	*Cotterpin, 1/8 x 1 In.	7/	54723	Bracket, Brake Rod	
31	41105	Wheel	72	54715	Rod, Brake	
32	24167	Valve Stem	73	40974	Shoulder Bolt, Parking Brake	
33	41106	Tire	74	43968	Spring, Parking Brake	
34	_ 180112	*Screw, Hex hd, 5/16-18 x 2-3/4 ln.	75	50980	Arm, Parking Brake	
	Transaxle	^Peerless 3 speed, Model 900	76	50562	Spring, Clutch Pedal	
36	35410	Spring, Brake Return	77	43956	Shaft, Brake-Clutch Pedal	
37	642	Flatwasher, 3/4 In.	78	121222	*Pin, Cotter, 3/32 x 3/4 ln.	
38	36625	"E" Ring				
39	40394	Hub Cap	80	55722	Brake Pedal Assembly	
40	42815	Flatwasher, 3/4 In.	81	301649	Repair Parts Manual (Not Illustrated)	
41	39628	Key, 3/16 x 3/16 x 2-1/2 In.	82	63019	Operator's Manual (Not Illistrated)	


^(*) Standard Hardware Items - May Be Purchased Locally.

^(*) Contact Tecumseh/Peerless authorized service dealer for parts and warranty.
(~) Contact Engine Manufacturer's authorized service dealer (See Engine Manual) for parts and warranty.

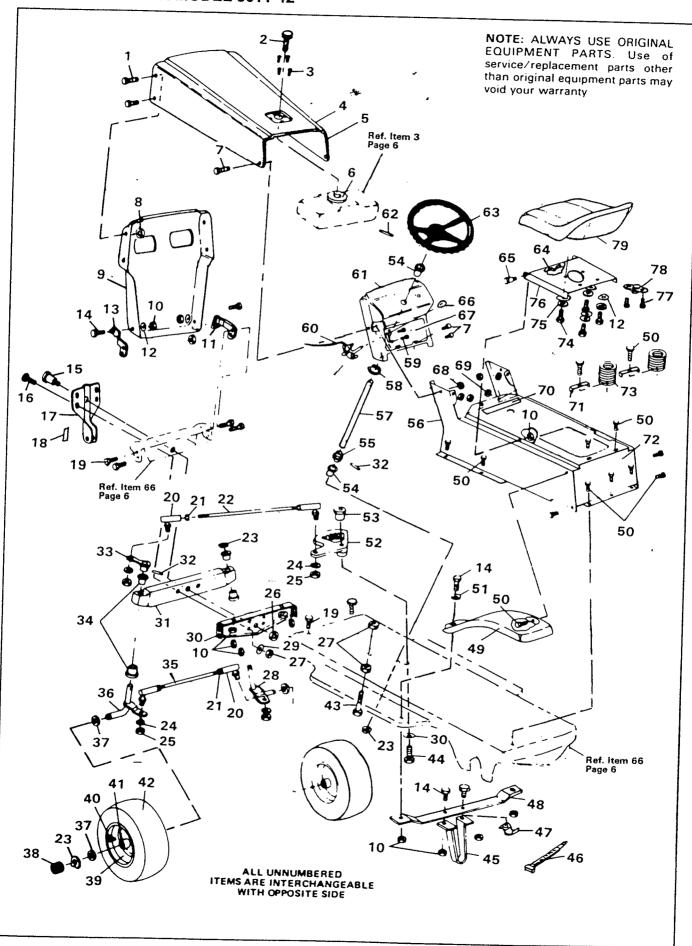

Key No.	Part No.	Description	Key No.	Part No.	Description
1	273243	Screw, Hex, Hd, 1/4-20 x 3/4 In.	41	39979	Bearing
2	50988	Gas Gauge	42	41108	Tire
3	49050	Screw, Plastite, 1/4-10 x 3/4 In.	43	49930	Upstop Bolt
4	57793	Hood	44	39573	Screw, Hex Hd, Lock, 3/8-24 x 1 in.
5	45608	Edging, Hood	45	301258	Bracket, Deck Guide
6	54885	Pad, Vibration	46	57444	Tie, Wire
7	274672	Screw, Hex Hd, 1/4-20 x 5/8 in.	47	57569	Retainer, Wire
8	50352	Locknut, Wide Flange, 1/4-20 Thd.	48	43964	Bracket, Deck Guide Support
9	56354	Grille	49	43970	Fender
10	9413447	Locknut, Hex, 3/16-18 Thd.	50	995346	*Screw, Taptite, 1/4-20 x 1/2 In.
11	49040	Bracket, Grille Support, R.H.	51	446363	*Flatwasher, 5/16 In.
12	120393	*Flatwasher, 11/32 in.	52	48543	Sector Gear
13	49041	Bracket Grille Support, L.H.	53	44011	Shoulder Bolt, Sector Gear
14	122017	*Screw, Hex Hd, 5/16-18 x 1 In.	54	54902	Bearing, Steering
15	50720	Shoulder Bolt, Axle Pivot	55	44009	Pinion Gear
16	122201	*Screw, Hex Hd, 3/8-16 x 2-3/4 ln.	56	56226	Console Assembly
17	58321	Bracket, Deck Hanger	57	44008	Shaft, Steering
18	70574	Decal, Caution	58	39492	Retaining Ring
19	120228	*Screw, Hex Hd, 5/16-18 x 5/8 In.	59	35287	Screw, Taptite, No. 8-32 x 3/8 in.
20	21275	Ball Joint	60	50117	Lever, Throttle Control
21	124925	Nut Hex, 3/8-24 Thd. 61 55564		Dash Assembly	
22	56190			Spring Pin, 1/4 x 2 In.	
23	36625	"E" Ring	63	301251	Steering Wheel
24	120382	*Lockwasher, Split, 3/8 In.	64	41482	Press Clip
25	120369	*Nut, Hex, 3/8-24 Thd.	65	20507	Shoulder Bolt
26	274654	Locknut, Hex, 1/4-20 Thd.	66	50607	Knob, Throttle Control Lever
27	9413534	Locknut, 3/8-16 Thd.	67	70060	Decal, Lower Dash
28	55518	Spindle, Right	68	51335	Locknut, Wide Flange, 1/4-20 Thd.
29	2483	Spring Washer	69	9424215	Locknut, Hex, 1/4-20 Thd.
30	56362	Bracket, Front Axle Support	70	70117	Decal, Caution
31	56400	Front Axle Assembly	71	300284	Clip, Seat Spring
32	454565	Roll Pin	72	56235	Cover, Console, Rear
33	49447	Arm, Steering	73	56220	Spring Seat
34	50546	Bearing, Spindle	74	122007	*Screw, Hex Hd, 5/16-18 x 3/4 ln.
35	55666	Tie Rod	75	120638	*Lockwasher, Split, 5/16 In.
36	55519	Spindle, Left	76	57417	Seat Bracket
37	642	Flatwasher, 3/4 In.	77	160505	Screw, SI Hd, 1/4-20 x 3/8 In.
38	40394	Hub Cap	78	57547	Switch, Seat
39	39829	Wheel w/Bearing	79	57452	Seat
40	24167	Valve Stem			
			L		·

^(*) Standard Hardware Items - May Be Purchased Locally.

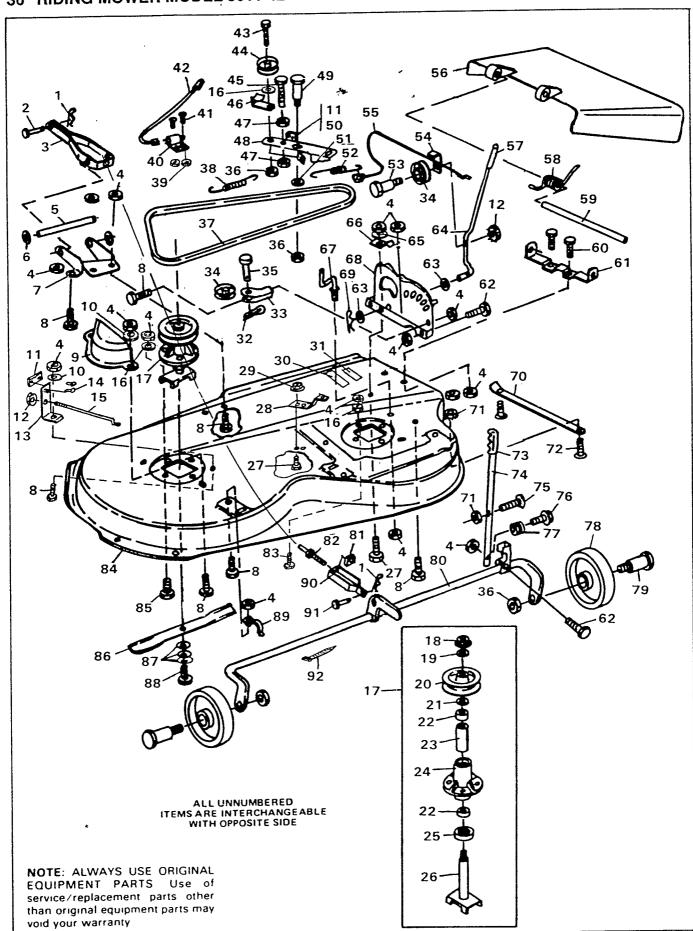

Key	T .	· ·	 	Cey	T		
No.	Part No.	Description		Vo.	Part No.	Description	
1	56180	Hairpin Cotter		47	271172	Nut, Keps, 1/4-20 Thd.	
2	47816	Pin, Clevis		48	300491	Idler Arm Assy. (Incl. Nos. 11 & 50)	
3	57340	Pivot Bracket		49	300180	Shoulder Bolt	
4	9413447	Locknut, 5/16-18 Thd.		50	41601	Rivet, Brake Pad	
5	57196	Pin, Pivot	11.	51	996416	*Flatwasher, 3/8 In.	
6	20864	"E" Ring	11:	52	300683	Spring, Clutch	
7	57327	Lift Support Plate	11:	53	57322	Shoulder Bott	
8	120228	*Screw, Hex Hd, 5/16-18 x 5/8 In.		54	52456	Retainer, Cable	
9	57328	Belt Guard, L.H. Pulley		55	57326	Clutch Cable	
10	120393	Flatwasher, 11/32 In.		56	57361	Chute Guard	
11	41471	Brake Pad	! ! :	57	46478	Grip, Clutch Lever	
12	9424215	Locknut, 1/4-20 Thd.		58	55767	Spring, Discharge Chute	
13	300181	Blade Bracket Assy.(Incl Nos 11 & 14)		59	57317	Rod, Pivot	
14	135624	Rivet, Brake Pad	(60	120834	*Screw, Hex Hd, 5/16-18 x 1/2 ln.	
15	300315	Rod, Brake Release		61	57360	Bracket, Pivot	
16	996307	Washer		62	122040	*Screw, Hex Hd, 5/16-18 x 1-1/2 ln.	
17	56424	Quill Assy. (Incl. Nos. 18-26)		63 ·	120396	Flatwasher	
18	51445	Locknut, Flange		64	300188	Clutch Lever	
19	56365	Flatwasher		65	120386	*Flatwasher, 5/16 In. I.D.	
20	56390	Pulley		66	57321	Spring	
21	51449	Spacer		67	57318	Retainer, Belt	
22	49562	Bearing	1 6	68	57337	Quadrant	
23	50818	Spacer, Tube		69	8260	Hairpin Cotter	
24	55547	Quill		70	57314	Skid Bar	
25	50616	Dust Shield		71	271184	*Nut, Keps, 5/16-18 Thd.	
26	56425	Saddle & Shaft Assembly		72	126216	*Carriage Bolt, 5/16-18 x 3/4 ln.	
27	180077	*Screw, Hex Hd, 5/16-18 x 3/4 In.		73	56924	Grip, Height Adjust Lever	
28	300179	Bracket, Idler		74	57329	Height Adjust Lever	
29	44108	Nut, Hex, Wide Flange, 5/16-18 Thd.		75	57324	Screw, Latch	
30	67475	Decal, Height Adjust		76	995338	Screw, Taptite, 1/4-20 x 5/8 ln.	
31	68547	Decal, Caution		77	57319	Spring	
32	121222	*Cotter Pin, 3/32 x 3/4 ln.		78	52584	Wheel, Deck	
33	49320	Support, Cable Pulley		79	23763	Wheel Axle	
34	39298	Pulley, Nylon		30	58167	Pivot Tube Assembly	
35	49332	Pin, 3/8 x 1 In.		31	120372	*Nut, Square, 1/4-20 Thd.	
36	9413534	Locknut, 3/8-16 Thd.		32	300341	Lift Cable	
37	58170	V-Belt		33	180083	*Screw, Hex Hd, 5/16-18 x 1-1/2 ln.	
38	35410	Spring		34	58169	Mower Deck	
39	271166	Nut, Keps, No. 10-24 Thd.		35	180079	*Screw, Hex Hd, 5/16-18 x 1 In.	
40	57476	Switch		36	58212	Blade	
41	159943	Screw, Pan Hd, No. 10-24 x 5/8 ln.		37	2483	Formed Washer	
42 43	57588 57325	Wire Assembly		38	39573	Screw, Hex Hd, 3/8-24 x 1 In.	
43	300841	Carriage Bolt, 3/8-16 x 2 ln.		39 90	51985	Support, Pivot Tube	
45	121954	Pulley, Idler 310726	-	- 1	300703	Clevis, Lift Cable	
46	300844	*Screw, Hex Hd, 1/4-20 x 2 In. Retainer, Belt		91	39522	Pin, Clevis	
40	300044	ו זפומווופו, בשונ	1 9	"	57444	Wire Tie	

^(*) Standard Hardware Items - May Be Purchased Locally.

Klypebard. Side udherl 309 882

Key No.	Part No.	Description	
1	300626	Key, Ignition	
2	48140	Locknut (Switch Part)	1
3	138557	Lockwasher (Switch Part)	7.4
4 5	300687	Switch, Ignition	**
5	49211	Fuse	- 1
6	57642	Wire Harness Assembly	- 1
7	56360	Bracket, Battery, Hold-Down	
8	120375	Nut, Hex, 1/4-20 Thd.	I
9	120380	Locknut, Split, 1/4 In.	
10	120392	*Flatwasher, 9/32 In.	
11	55511	Ground Wire	- 1
12	271172	Nut, Deps, 1/4-20 Thd.	- 1
13	57486	Battery	- 1
14	120854	*Screw, Hex Hd, 1/4-20 x 5/8 ln.	- 1
15	40234	Battery Rod	ĺ
16	120368	Locknut, Hex, 5/16-24 Thd.	1
17	138485	*Washer, Shakeproof, 5/16 In.	

Key No.	Part No.	Description
18 19 - 20 21 22 23 24	187745 9424215 45877 41204 45878 56635 53716	*Screw, Hex Hd. 1/4-20 x 3/4 ln. Locknut, Hex, 1/4-20 Thd. Nut (Lockout Switch Part) Switch, Lockout Lockwasher (Lockout Switch Part) Nut, Hex, 15/32-32 Thd.
24 25 26 27 28 29 30 31 32 33	53716 49734 54888 41482 56189 50668 52571 52572 52570	Solenoid Bracket, Switch Mounting Engine Part Retainer, Wire Wire Clip, Press Lead Wire, Headlight Screw, Hex Wa Hd No. 10-14 x 1/2 In. Bezel, Headlight Bulb, Headlight Lens, Headlight

(*) Standard Hardware Items - May Be Purchased Locally.

