## REPAIR PARTS MANUAL

# 32" - 8 H.P. RIDING MOWER

Rød

MODEL 3554-50

# 

#### ONE YEAR LIMITED WARRANTY

For one (1) year from date of purchase by the first consumer for residential use (thirty (30) days commercial use), Western International Incorporated warrants that it will replace free of charge, including labor, any original part of any Western International Incorporated product found to be defective by any authorized Service Dealer or the factory, except the battery which is warranted for ninety (90) days from date of purchase.

This warranty does not cover engine, transmission, transaxle or differential (these items are covered by their manufacturer's own warranty). This warranty does not cover parts that have failed due to normal wear or parts that have failed subject to misuse or abuse. Transportation of the unit or part to and from an authorized Service Dealer or the factory is the responsibility of the owner.

A step by step explanation as to what procedure should be followed for this Warranty is:

- 1. If a part becomes defective, contact the store where the unit was purchased for the name and address of the authorized Service Dealer nearest to you.
- 2. If you cannot locate an authorized Service Dealer, write Service Department of Western International Incorporated for the name and address of the authorized Service Dealer in your area or call the Service Department at 1-800-247-7464 (outside lowa), 1-515-265-3461 (lowa).
- 3. Return the defective product, along with proof of purchase to such authorized Service Dealer for replacement of any defective part where covered by this warranty.

There is no other express warranty. Implied warranties, including those of merchantibility and fitness for a particular purpose are limited to one (1) year from date of purchase. Liability for incidental or consequential damages are excluded.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Western International Incorporated

P.O. Box 377

Des Moines, Iowa 50302

#### **UNIT PARTS AND SERVICE**


This manual contains repair parts information and instructions for safety. Read the operator's manual carefully and completely so that you will know proper assembly, use and care of your unit. Fill in and mail the registration card packed with the unit. For service other than covered in operator's manual, contact an authorized service dealer. A nationwide parts and service organization has been established to provide locally available parts and service. A list of authorized parts distributors has been included in this manual. When ordering repair parts, always give the following information: 1. The Part Name; 2. The Part Number; 3. The Quantity desired; 4. The Full (eight digit) Model Number of the unit. The model number will be found on a plate attached to the unit.

Look for this symbol. It means - ATTENTION! BECOME ALERT! A HAZARD TO OPERATOR, BYSTANDERS, PROPERTY OR EQUIPMENT MAY EXIST.

WESTERN INTERNATIONAL INCORPORATED P.O. BOX 377 DES MOINES, IOWA 50302

Part No. 63054

0287

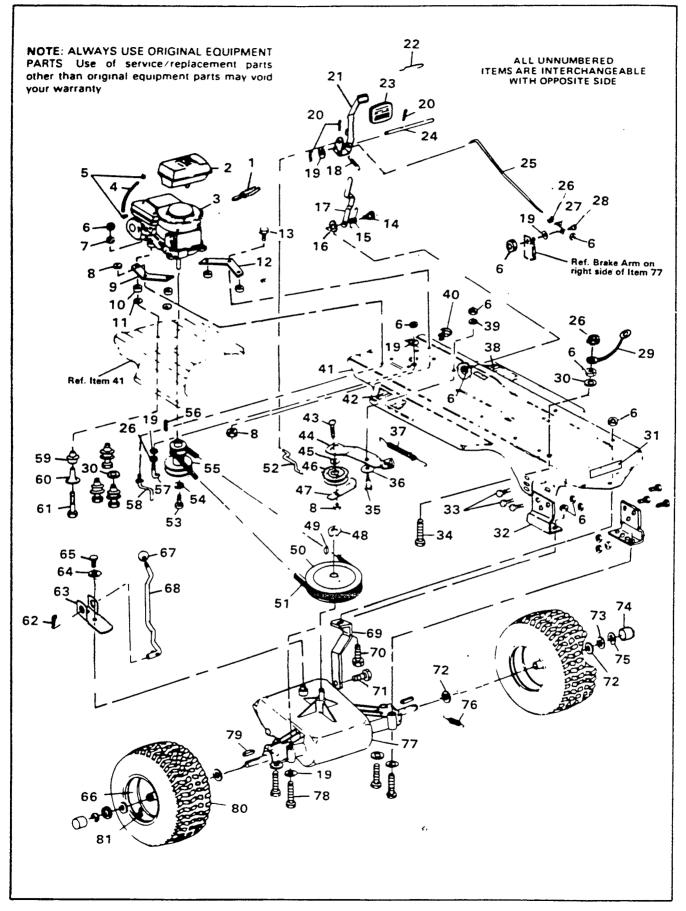


ALWAYS GIVE THE FOLLOWING INFORMATION WHEN ORDERING REPAIR PARTS 1 The PART NUMBER: 2 The PART NAME 3 QUANTITY DESIRED: 4 The MODEL NUMBER (As shown on Model Plate) SEND PART ORDERS AS PER INSTRUCTIONS ON THE FRONT PAGE

YOUR UNIT IS RIGHT HAND (RH) OR LEFT HAND (LH) AS YOU STAND BEHIND IT DO NOT USE KEY NUMBERS WHEN ORDERING REPAIR PARTS. ALWAYS USE PART NUMBERS All replacement parts will be supplied in current production colors or in a neutral color

A handling fee is applicable to small parts orders


4	•			
	Key	1		٦
	No.		Description	
1	1	54873	Trough, Oil Drain	ᅥ
			Gas Tank	1
	2 3 - 4	Engine	§See Footnote Below	-
	- 4	48049	Gas Line	1
١	5	41008	Clip, Gas Line	
- 1	6	9413447	Locknut, Hex 5/16-18 Thd.	ĺ
-	7	120638	Lockwasher, Split, 5/16 In.	- 1
	8	9413534	Locknut, Hex, ¾-16 Thd.	-
- 1	9	43955	Vibration Bracket, L.H.	-
	10	44015	Mount, Upper	-
-	11	138542	Washer, Shakeproof	1
1	12	43954	Vibration Bracket, R.H.	
1	13	180120	Screw, Hex Hd, 36-16 x 34 In.	1
1	14	40974	Shoulder Bolt, Parking Brake	
	15	43968	Spring, Parking Brake	
1	16	32327	Wave Washer	
	17	50980	Arm, Parking Brake	
	18	50562	Spring, Clutch Pedal	
I	19	120386	Flatwasher, ¼ In.	
1	20	121222	Pin, Cotter, 3/32 x 3/4 In.	
1	21	55722	Brake Pedal Assembly	
l	22	- 55025	Retainer, Brake Pad	
	23 24	53979	Rubber Pad, Brake Pedal	
		43956	Shaft, Brake-Clutch Pedal	
1	25 26	54715	Rod, Brake	-
	27	271184 54723	Nut, Hex, Keps, 5/16-18 Thd.	1
1	28	20507	Bracket, Brake Rod	
ı	29	55511	Shoulder Bolt	
	30	138485	Ground Wire Washer, Shakeproof	
	31	68542	Decal, Caution	
	32	53768	Bracket, Axle	
l	33	120228	Screw, Hex Hd, 5/16-18 x % in.	
1	34	122017	Screw, Hex Hd, 5/16-18 x 11/4 In.	
	35	41890	Shoulder Bolt	
	36	4107	Washer	
	37	49276	Spring, Main Drive	-
	38	54618	Foot Pad, Right	
l	39	45602	Washer	
	40	54888	Retainer, Wire	
	41	54749	Main Frame	
	42	54955	Foot Pad, Left	
	43	45892	Carriage Bolt, 36-16 x 1½ In.	

	Key			_
	No.		Description	
	44	53762	Idler Arm	_
	45		Flatwasher, 25/64 In.	
	46	1 000.	Pulley, Idler	
	47	,	Belt Retainer	
	48	22053	Retaining Ring	
	49		Key, Woodruff, No. 606	
	50		Pulley, Transaxle	ļ
	51 52	54758	V-Belt	
	53	43980 123567	Rod, Clutch	
	54	120383	Screw, Hex Hd, 7/16-20 x 1 In.	
	55	55795	Lockwasher, Split, 7/16 In. Pulley, Engine	
i	56	33200	Key, Engine Pulley	
	57	49896	Belt Guide, Trans. Drive Belt	1
	58	50653	Belt Guide, Blade Drive	
	59	44016	Mount, Lower	l
ı	60	42273	Sleeve	Ì
	61	180112	Screw, Hex Hd, 5/16-18 x 23/4 ln.	
	62	137185	Pin, Cotter, 1/8 x 1 In.	1
١	63	56256	Shift Bracket	1
i	64	57157	Washer	1
ı	65	56255	Screw, Nylock, 1/4-28 x 3/4 In.	ı
I	66	36182	Wheel	1
ı	67 68	55514	Knob, Gear Shift	1
ı	69	55526	Shift Lever	l
١	70	54713 122007	Bracket, Stabilizer	I
l	71	35498	Screw, Hex Hd, 5/16-18 x ¾ In.	ı
I	72	642	Screw, Hex Wa. Tap, 5/16-18 x 3/4 In. Flatwasher	
ı	73	42815	Flatwasher	I
l	74	40394	Hub Cap	1
l	75	36625	"E" Ring	l
l	76	35410	Spring, Brake Return	l
l	77	Transaxie	†Peerless 3 speed Model 900	İ
l	78	180112	Screw, Hex Hd, 5/16-18 x 23/4 In.	l
l	79	39628	Key, $3/16 \times 3/16 \times 2\frac{1}{2}$ In.	l
ı	80	42091	Tire	
1	81	24167	Valve Stem	
	82	63019	Parts Manual (Not Illust.) (English)	
	83 84	63054	Operators Manual (Not Illust.) (English)	ĺ
	04	63055	Owners Manual (Not Illust.) (French)	
	}	1	1	
_			·	1

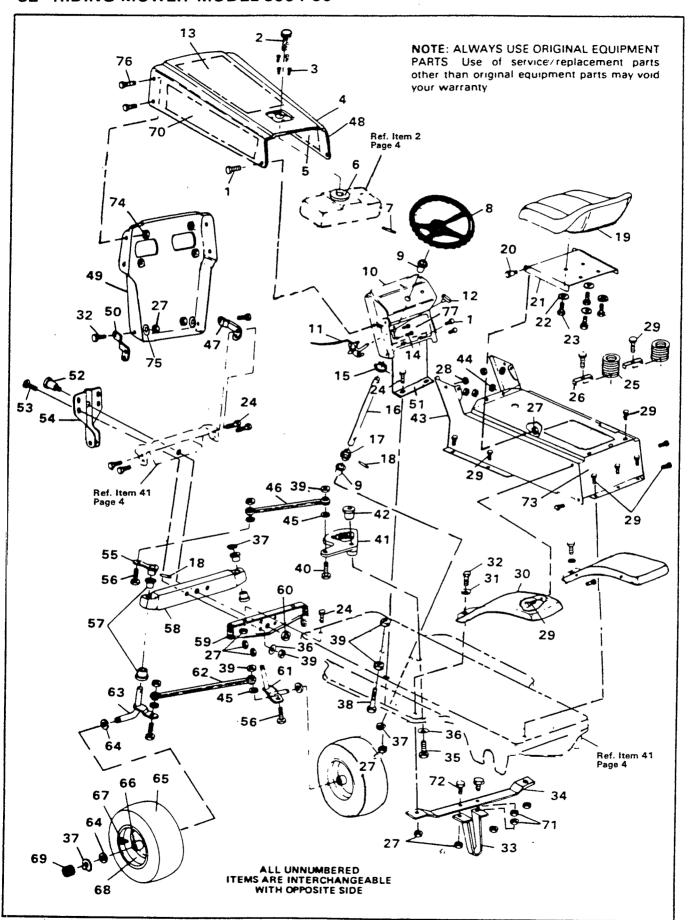


Key No.	Part No.	Description
1	274672	Screw, Hex Hd. ¼-20 x 5/8 In.
	50988	Gas Gauge
3	49050	Screw, Plastite, ¼-10 x ¾ In.
1 4	49615	Hood
2 3 4 5	55932	Foam Pad. Hood, R.H.
6	54885	Pad, Vibration
7	456836	Spring Pin, ¼ x 2¼In.
8	55633	Steering Wheel
9	54902	Bearing, Steering
10	55564	Dash Assembly
111	50117	Lever, Throttle Control
12	39486	Knob. Throttle Control Lever
13	55930	Foam Pad, Hood, Top
14	35287	Screw, Taptite, No. 8-32 x % In.
15	39492	Retaining Ring
16	44008	Shaft, Steering
17	44009	Pinion Gear
18	454565	Roll Pin
19	57500	Seat
20	20507	Shoulder Bolt
21	57417	Seat Bracket
22	120638	Lockwasher, Split, 5/16 In.
23	120834	Screw, Hex Hd, 5/16-18 x 1½ In.
24	120228	Screw, Hex Hd, 5/16-18 x % In.
25	56220	Spring, Seat
26	56060	Clip, Seat Spring
27	9413447	Locknut, Hex. 3/16-18 Thd.
-28	51335	Locknut, Wide Flange, ¼-20 Thd.
29	995346	Screw, Taptite, 14-20 x 1/2 In.
30	43970	Fender
31	446363	Flatwasher, 5/16 In.
32	122017	Screw,Hex Hd, 5/16-18 x 1 In.
33	44500	Bracket, Deck Guide
34	43964	Bracket, Deck Guide Support
35	39573	Screw, Hex Hd, Lock, 3/4-24 x 1 in.
36	2483	Spring Washer
37	36625	"E" Ring
38	49930	Upstop Bolt

No.   Part No.   Description	Key	Don't No.	Description
40			T
41 44010			1
42 44011 56226 Console Assembly 44 9424215 Locknut, Hex, ¼-20 Thd. 45 120382 Lockwasher, Split, ¾ In. 46 55513 Drag Link Assembly 47 49040 Bracket, Grille Support, R.H. 48 45608 Edging, Hood 49 56672 Grille Support, L.H. 51 55537 Bulkhead, Console 50 122201 Screw, Hex Hd, ¾-16 x 2¾ In. 55 49447 Arm, Steering 56 122145 Screw, Hex Hd, ¾-16 x 1¼ In. 57 50546 Bearing, Spindle 58 56400 Front Axle Assembly 59 56362 Bracket, Front Axle Support 50 1274654 Coknut, Hex, ¼-20 Thd. 55870 Spindle, Left 61 55870 Spindle, Left 62 55512 Tire Rod 63 55869 Spindle, Left 64 642 Flatwasher, ¾ In. 56 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 69 55931 Foam Pad, Hood, L.H.			
43 56226 Console Assembly 44 9424215 Locknut, Hex, ¼-20 Thd. 45 120382 Lockwasher, Split, ¾ In. 47 49040 Bracket, Grille Support, R.H. 48 45608 Edging, Hood 49 56672 Grille Support, L.H. 51 55537 Bracket, Grille Support, L.H. 51 55537 Screw, Hex Hd, ¾-16 x 2¾ In. 54 56261 Bracket, Deck Hanger 55 49447 Arm, Steering 56 122145 Screw, Hex Hd, ¾-16 x 1¼ In. 57 50546 Bearing, Spindle 58 56400 Front Axle Assembly 59 56362 Bracket, Front Axle Support 50 274654 Coknut, Hex, ¼-20 Thd. 55870 Spindle, Right 56 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 69 Foam Pad, Hood, L.H.			f (
44 9424215	_	_	
45			· ·/
46 55513 Drag Link Assembly 47 49040 Bracket, Grille Support, R.H. 48 45608 Edging, Hood 49 56672 Grille 50 49041 Bracket, Grille Support, L.H. 51 55537 Bulkhead, Console 52 50720 Shoulder Bolt Axle Pivot 53 122201 Screw, Hex Hd, ¾-16 x 2¾ In. 54 56261 Bracket, Deck Hanger 55 49447 Arm, Steering 56 122145 Screw, Hex Hd, ¾-16 x 1¼ In. 57 50546 Bearing, Spindle 58 56400 Front Axle Assembly 59 56362 Bracket, Front Axle Support 60 274654 Locknut, Hex, ¼-20 Thd. 55870 Spindle, Left 61 55870 Spindle, Left 62 55512 Tire Rod 63 39979 Bearing 64 642 Flatwasher, ¾ In. 65 41096 Tire 66 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			
47 49040 Bracket, Grille Support, R.H. 48 45608 Edging, Hood 49 56672 Grille 50 49041 Bracket, Grille Support, L.H. 51 55537 Bulkhead, Console 52 50720 Shoulder Bolt Axle Pivot 53 122201 Screw, Hex Hd, ¾-16 x 2¾ In. 54 56261 Bracket, Deck Hanger 55 49447 Arm, Steering 56 122145 Screw, Hex Hd, ¾-16 x 1¼ In. 57 50546 Bearing, Spindle 58 56400 Front Axle Assembly 59 56362 Bracket, Front Axle Support 50 274654 Locknut, Hex, ¼-20 Thd. 55870 Spindle, Right 55869 Spindle, Left 64 642 Flatwasher, ¾ In. 56 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			
48			, ,
49			
50		,	
51			
52			
53			
54			+··
55			
56			
57 50546 Bearing, Spindle 58 56400 Front Axle Assembly 59 56362 Bracket, Front Axle Support 60 274654 Locknut, Hex, ¼-20 Thd. 61 55870 Spindle, Right 62 55512 Tie Rod 63 55869 Spindle, Left 64 642 Flatwasher, ¾ In. 65 41096 Tire 66 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			
58			
59			
60 274654 Locknut, Hex, 1/4-20 Thd. 61 55870 Spindle, Right 62 55512 Tie Rod 63 55869 Spindle, Left 64 642 Flatwasher, 3/4 In. 65 41096 Tire 66 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			
61 55870 Spindle, Right 62 55512 Tie Rod 63 55869 Spindle, Left 64 642 Flatwasher, ¾ In. 65 41096 Tire 66 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.	1		
62 55512 Tie Rod 63 55869 Spindle, Left 64 642 Flatwasher, ¾ In. 65 41096 Tire 66 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			I
63 55869 Spindle, Left 64 642 Flatwasher, ¾ In. 65 41096 Tire 66 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.	_		
64 642 Flatwasher, ¾ In. 65 41096 Tire 66 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			
65 41096 Tire 66 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			
66 39979 Bearing 67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			
67 24167 Valve Stem 68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			1
68 39937 Wheel w/Bearing 69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			, -
69 40394 Hub Cap 70 55931 Foam Pad, Hood, L.H.			
70   55931   Foam Pad, Hood, L.H.			· · · · · · · · · · · · · · · · · · ·
			1
	1		
71   120377   Nut, Hex, ¾-16 Thd.			
72 122040 Screw, Hex Hd, 5/16-18 x 1½ In.			
73 56235 Cover, Console, Rear			
74 50352 Locknut, Flange, ¼-20 Thd.			
75   120386   Flatwasher, 5/16 In.	1		· - · - · · · · · · · · · · · ·
76 273243 Screw, Hex Hd, ¼-20 x ¾ In.			
77 70600 Decal, Dash, Lower	77	70600	Decal, Dash, Lower

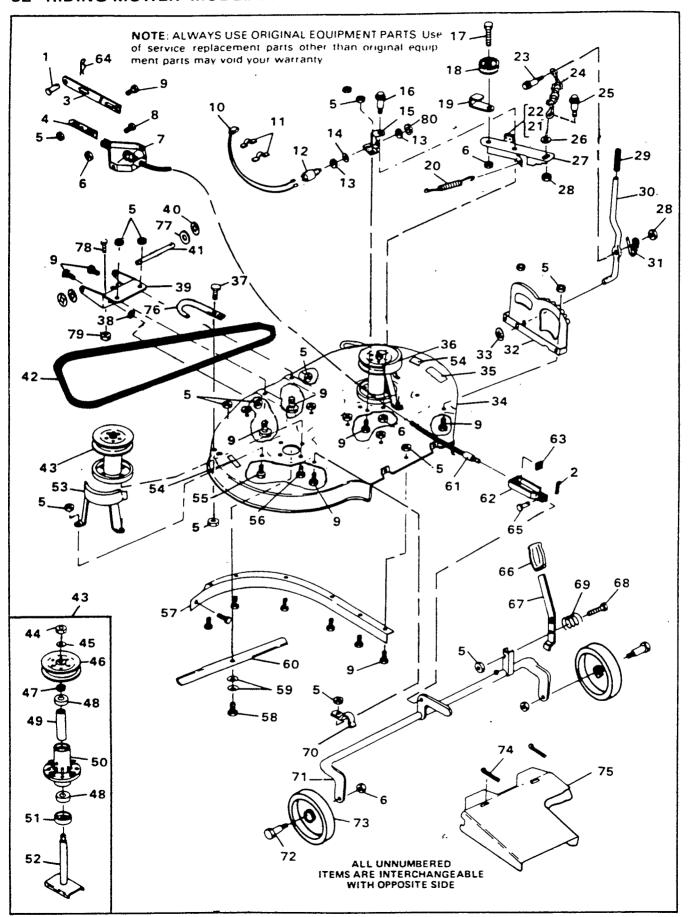

Key			Key		
No.	Part No.	Description	No.	Part No.	Description
1	47816	Pull Pin	41	55724	Pin, Pivot
2	8260	Hairpin Cotter	42	47390	V-Belt
3	49059	Bar Hitch	43	56283	†Quill Assy. (Incl. Nos. 44-52
4	49058	Lock Bracket	44	51445	Locknut, Flange
5 6	9413447	Locknut, 5/16-18 Thd.	45	56365	Flatwasher
6	9413534	Locknut, 3/8-16 Thd.	46	56391	Pulley
7	50613	Pivot Bracket	47	56280	Spacer
8	120918	Screw, Hex Hd, 3/8-16 x 11/2 ln.	48	49562	Bearing
9	120228	Screw, Hex Hd, 5/16-18 x 5/8 ln.	49	50818	Spacer, Tube
10	43038	Assembly	50	55547	Quill
11	41482	Clip, Press	51	50616	Dust Shield
12	41204	Switch, Lockout	52	56623	Saddle and Shaft Assembly
13	45877	Nut (Lockout Switch Part)	53	47353	Cover, Pulley, L.H.
14	45878	Lockwasher (Lockout Switch Part)	54	68542	Decal, Caution
15	47517	Bracket, Idler Arm	55	122017	Screw Hex Hd, 5/16-18 x 1 In.
16	47516	Shoulder Bolt	56	50634	Screw, Taptite, 5/16-18 x % In.
17	122168	Screw, Hex Hd, %-16 x 1% In.	57	47354	Baffle, L.H.
18	52694	Pulley, Idler	58	39573	Screw, Hex Hd, %-24 x 1 In.
19	52695	Belt Retainer	59	2483	Formed Washer
20	35410	Spring	60	56820	Blade, 16 In.
21	41601	Rivet, Brake Pad	61	55880	Lift Cable
22	41471	Brake Pad	62	39404	Clevis, Lift Cable
23	53696	Shoulder Bolt	63	120372	Nut, Square, 1/4-20 Thd.
24	47357	Spring, Clutch Lever	64	56180	Hairpin Cotter
25	46563	Shoulder Bolt	65	39522	Pin, Clevis
26	120392	Flatwasher, 9/32 In.	66	20250	Hand Grip
27	53055	idler Arm Assy. (Incl. Nos. 21 & 22)	67	49131	Lever, Height Adjustment
28	9424215	Locknut, 1/4-20 Thd.	68	120696	Screw, Hex Hd, 5/16-18 x 21/4 in.
29	46478	Grip, Clutch Lever	69	53246	Spring
30	53693	Lever, Clutch	70	51985	Support, Pivot Tube
. 31	46561	Spring, Clutch Lever	71	54606	Pivot Tube Assembly
32	53247	Quadrant	72	23763	Wheel Axie
33	53697	Push Nut	73	52584	Wheel Assy., Deck
34	51948	Mower Deck	74	120123	Pin, Cotter, 1/8 x 11/4 In.
35	68882	Decal, Height Adjust	75	54528	Chute Extension
36	47352	Cover, Pulley, R.H.	76	51921	Skid
37	122007	Screw, Hex Hd, 5/16-18 x 3/4 In.	77	996425	Flatwasher
38	996416	Flatwasher, % In.	78	55686	Screw, Mach., ¼-20 x % In.
39	48676	Lift Support, Plate Assembly	79	271172	Keps Nut, ¼-20 Thd.
40	20864	"E" Ring	80	56635	Nut, Hex

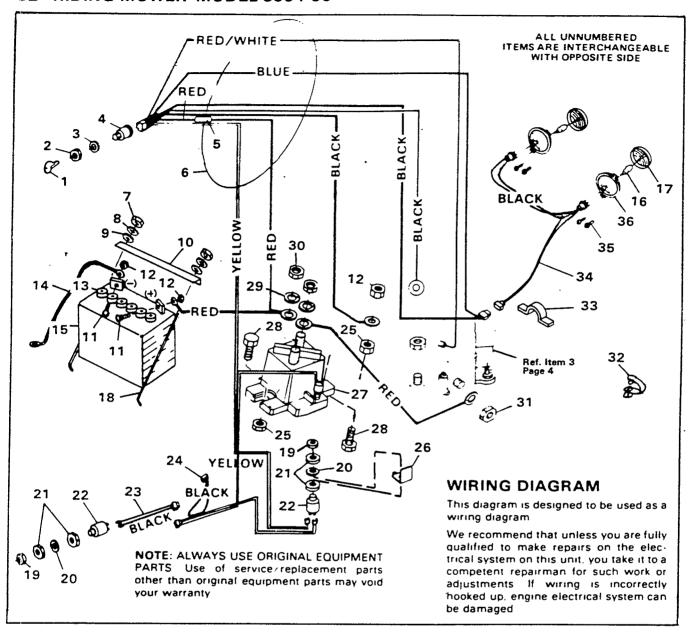

Key		
No.	Part No.	Description
1	49643	Key, Ignition
2 3	48140	Locknut (Switch Part)
3	138557	Lockwasher (Switch Part)
4	52583	Switch, Ignition w/Keys
5	49211	Fuse
6	55528	Wire Harness Assembly
7	120375	Nut, Hex, ¼-20 Thd.
8	120380	Lockwasher, Split
9	120392	Flatwasher
10	56360	Bracket, Battery, Hold-Down
11	120854	Screw, Hex Hd, ¼-20 x % In.
12	271172	Nut, Keps, ¼-20 Thd.
13	40892	Cap, Battery
14	55511	Ground Wire
15	52936	Battery
16	52572	Bulb, Headlight
17	52570	Lens, Headlight
18	40234	Battery Rod
19	56635	Nut, Hex

Key No.	Part No.	Description
20	45878	Lockwasher (Lockout Switch Part)
21	45877	Nut (Lockout Switch Part)
22	41204	Switch, Lockout
23	43038	Wire Assembly, Deck Switch
24	42071	Wire Assembly, By-Pass
25	9424215	Locknut, Hex, 1/4-20 Thd.
26	49734	Bracket, Switch Mounting
27	53716	Solenoid
28	187745	Screw, Hex Hd, ¼-20 x ¾ In.
29	138485	Washer, Shakeproof, 5/16 In.
30	120368	Locknut, Hex, 5/16-24 Thd.
31		Engine Part
32	54888	Retainer, Wire
33	41482/.	Wire Clip, Press
34	56189	Lead Wire, Headlight
35	50668	Screw, Hex Wa. Tap, No. 10-14 x 1/2 In.
36	52571	Bezel, Headlight