

DK
GB

Betjeningsvejledning
User Manual

SELEKTA®

SLW 610



VIGTIGT - FØR START!

HUSK AT PÅFYLDÉ MOTOROLIE

IMPORTANT - BEFORE START!

REMEMBER TO FILL ENGINE OIL


Illustrationer / Illustrations

Figur / Figure





3

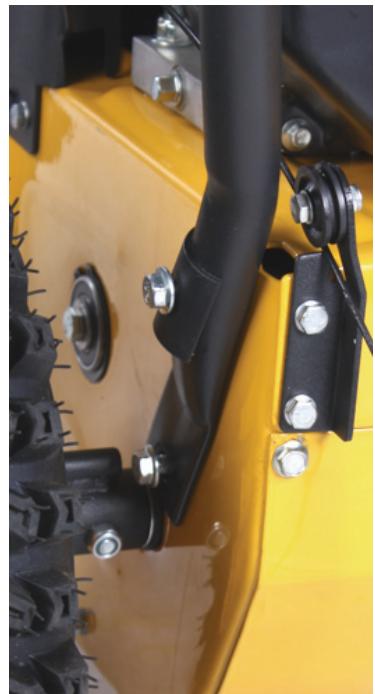

4



5





6




7




8



9

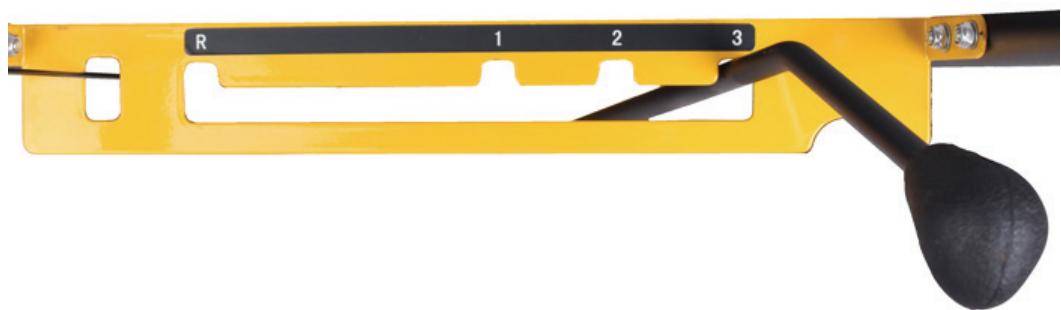

10

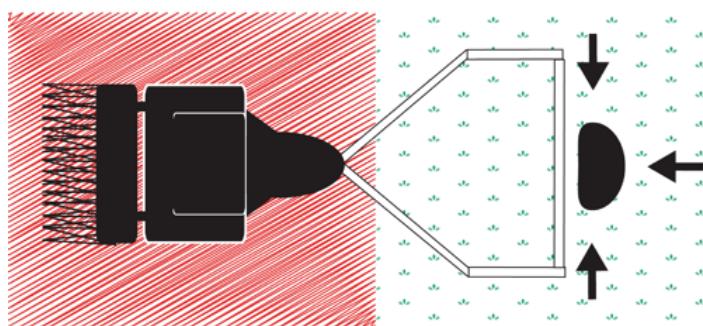

11



1

DK - Original brugsanvisning

Tillykke med din nye fejmaskine. Læs venligst denne brugsanvisning grundigt, især de sikkerhedsmæssige advarsler markeret med symboler:



Indholdsfortegnelse

Illustrationer.....	2
Sikkerhedsforskrifter	6
Indhold.....	7
Identifikation af dele	7
Montering	8
Betjening	8
Betjenings sikkerhedszone	8
Højdejustering af børste	8
Vinkeljustering af børste.....	8
Tekniske specifikationer.....	9
Fejlfinding	9

Registrering af produkt / Reservedele

Register Deres produkt online på Mit Texas. Mit Texas findes på www.texas.dk.

Efter registrering kan Texas give Dem en endnu bedre service.

Når De har registreret Deres produkt, sørger Texas for at tilknytte relevant information til produktet. Derudover kan Texas kontakte Dem med relevant information vedrørende Deres produkt.

På vores hjemmeside www.texas.dk. Finder De selv varenumre, det giver en hurtigere ekspedition.

Reservedele kan købes online på www.texas.dk eller kontakt Deres nærmeste forhandler. De finder forhandlerliste på www.texas.dk

Tilbehør til SLW610 (figur 12):

Opsamler kasse	90228000100
Sneskraber	90228500100
Snekæder:	90228700100
Sælges separat	

Sikkerhedsforskrifter

Klargøring

⚠ Placer ikke hænder og fødder i nærheden af eller under roterende dele.

⚠ Læs denne brugsanvisning grundigt. Sørg for at lære de forskellige kontrolfunktioner, indstillinger og håndtag på udstyret at kende.

⚠ Find ud af, hvordan du standser enheden

⚠ Lad aldrig børn eller personer, der ikke har læst denne brugsanvisning, bruge maskinen. Bemærk, at der kan være lokale bestemmelser, der indeholder begrænsninger for operatørens alder.

- ⚠ Hvis du føler dig utilpas, eller hvis du har indtaget alkohol eller medicin, bør du ikke betjene maskinen.
- ⚠ Inspicer altid maskinen før brug. Kontroller, at der ikke er slidte eller beskadigede dele.
- ⚠ Udsift slidte eller beskadigede dele og skruer sætvis for at opretholde ligevægt.
- ⚠ Operatøren er ansvarlig for andre personers sikkerhed.
- ⚠ Benyt aldrig maskinen i nærheden af børn eller dyr.
- ⚠ Operatøren vil blive holdt ansvarlig for eventuelle ulykker, eller hvis der opstår farer for andre personer og deres ejendom.
- ⚠ Inspicer grundigt det område, hvor udstyret skal anvendes, og fjern eventuelle fremmedlegemer.
- ⚠ Undlad at påfynde brændstof indenfor, eller mens motoren kører.
- ⚠ Spildt benzin er yderst brandfarlig, påfyld aldrig, mens motoren stadig er varm.
- ⚠ Aftør spildt benzin før start af motoren. Den kan forårsage brand eller ekslosion!
- ⚠ Det er påkrævet at bære støvler med skridsikre såler og stålkappe. Undgå at bære løstsiddende tøj.

Betjening

⚠ Forlad ikke sikkerhedszonens under betjening af maskinen, hvis det er nødvendigt at forlade sikkerhedszonens, skal motoren slukkes, før zonen forlades.

⚠ Stop straks motoren ved kontakt med et fremmedlegeme, fjern tændrørshætten, og inspicer maskinen grundigt for skader. Reparer skaden, før du fortsætter

⚠ Hvis maskinen begynder at vibrere unormalt, skal du stoppe motoren og undersøge årsagen med det samme. Vibrationser er normalt et tegn på skader.

⚠ Sæt altid maskinen i frigear, sluk motoren og fjern tændrør, når enheden efterlades uden opsyn.

⚠ Sluk altid motoren og kontroller, at alle bevægelige dele er standset helt før udførelse af reparationer, justeringer eller eftersyn.

⚠ Udvis yderste forsigtighed ved arbejde på skråninger.

⚠ Betjen aldrig maskinen i hurtigt tempo.

⚠ Undlad at overbelaste maskinens kapacitet ved at forsøge at køre den for stærkt.

⚠ Undlad at køre med passagerer.

⚠ Vær opmærksom, når maskinen er i bakgear.

⚠ Tillad aldrig tilskuere at opholde sig foran enheden.

⚠ Frakobl altid børsterne, når de ikke er i brug.

- ⚠ Sørg for at betjene maskinen i dagslys eller i fuldt oplyste områder**
- ⚠ Sørg for godt fodfæste og hold godt fast i håndtagene. Gå, løb aldrig.**
- ⚠ Undlad at betjene udstyret med bare fødder eller iført sandaler.**
- ⚠ Udvis yderste forsigtighed ved ændring af retning på skrånninger**
- ⚠ Forsøg aldrig at foretage justeringer, når motoren kører.**
- ⚠ Udvis yderste forsigtighed, når du skubber eller trækker maskinen baglæns**
- ⚠ Betjen aldrig maskinen inden døre eller i områder med lav ventilation. Udstødningen fra motoren indeholder kulilte. Manglende overholdelse heraf kan medføre permanent skade eller dødsfald.**

Benzinsikkerhed

- ⚠ Udvis yderste forsigtighed ved kontakt med benzin. Benzin er yderst brandfarlig, og dampene er eksplorative.**
- ⚠ Der kan opstå alvorlig personskade, hvis du spilder benzin på dig selv eller på dit tøj. Skyl straks huden, og skift tøj med det samme!**
- ⚠ Anvend kun en godkendt benzinbeholder. Brug ikke en sodavandsflaske eller lignende!**
- ⚠ Sluk alle cigaretter, cigarer, piber og øvrige antændingskilder.**
- ⚠ Genopfyld aldrig maskinen indenfor.**
- ⚠ Lad motoren køle af før påfyldning af benzin**
- ⚠ Undlad at fyldde tanken mere end 2,5 cm under påfylderens bund, så der er plads til, at brændstoffet udvider sig.**
- ⚠ Sørg for, at benzindækslet er skruet godt fast efter påfyldning.**
- ⚠ Brug aldrig låsefunktionen på benzinpistolen ved påfyldning.**
- ⚠ Undlad at ryge under påfyldning.**
- ⚠ Påfyld aldrig inde i en bygning, eller hvor benzindampe kan komme i kontakt med en antændingskilde.**
- ⚠ Hold benzin og motor på afstand af apparater, blus, udendørs grill, elektriske apparater, maskinværktøj osv.**
- ⚠ Hvis benzintanken skal tømmes, skal det ske udenfor.**

Vedligeholdelse og opbevaring

- ⚠ Stop motoren ved udførelse af vedligeholdelsesarbejde og rengøring, ved udskiftning af værktøj og under transport på andre måder end ved egen kraft.**
- ⚠ Kontroller jævnligt, at alle skruer og møtrikker sidder fast. Fastspænd om nødvendigt.**
- ⚠ Motoren skal være helt afkølet før opbevaring inden døre eller ved overdækning.**
- ⚠ Hvis maskinen ikke er i brug i en periode, henvises til instrukserne i denne brugsanvisning.**
- ⚠ Vedligehold eller udskift sikkerheds- og instruktionsmærkater efter behov.**
- ⚠ Brug kun originale reservedele eller tilbehør. Hvis der ikke anvendes originale dele eller tilbehør, bortfalder garantien.**
- ⚠ Udskift fejlbehæftet lydpotte.**

Diverse

- ⚠ Der er ikke for fyldt olie på motoren fra fabrikken.**
- ⚠ Fabriksmonterede styreanordninger, f.eks. koblingskabler monteret på håndtaget, må ikke fjernes eller blotlægges.**
- ⚠ Tøm kun benzintanken udenfor. Benzin er yderst brandfarlig, og dampene er eksplorative.**
- ⚠ Kontroller, at maskinen står ordentligt fast under transport på en ladvogn osv.**
- ⚠ Reducer gas tilførselen under slukning af motoren, og luk brændstofhanen.**

Indhold

Figur 1:

- A. Maskinen
- B. Styr
- C. Gearstang
- D. Svingrør
- E. Motorvejledning og betjeningsvejledning

Identifikation af dele

Figur 2:

- A. Børste
- B. Hjul for kost / justering af fejehøjde
- C. Hjul
- D. Styr/håndtag
- E. Koblingsgreb - Aktivering af frem/bak
- F. Koblingsgreb - Aktivering af børster
- G. Gearskifter
- H. Svingrør
- I. Motor (kan variere fra billede)
- J. Remskærm

Montering

Fejemaskinen er næsten klar fra fabrikken. Der skal kun monteres få dele:

Faktiske model kan variere fra de viste illustrationer

Kontroller dæktrykket på begge hjul inden brug.
Det Korrekt dæktryk er 24 psi/1,7 bar. Figur 8.

! Kørsel med for lavt dæktryk kan ødelægge dæk og slange!

Handy Sweep – alle modeller

1. Løsn boltene i basis enheden for dernæst at monterer styret og fastspænd boltene
Se figur 3
2. Monter gearskefte stang som vist i figur 4
3. Træk kablerne op til koblingshåndtagene. Adskil metaldelene ved at dreje dem fra hinanden.
Monter delen med krogen i koblingshåndtaget. Sammel de 2 metaldele og spænd dem sammen indtil kablet er stramt. Se figur 5.
4. Monter svingrør, med de medfølgende bolte og møtrikker. Se figur 6.

Betjening

! Inden brug følges motorvejledningens anvisninger for klargøring af motor.

Inden brug skal alle større fremmedlegemer fjernes fra området. Større objekter kan skade fejemaskinen.
Kontroller samtidig at bolte på fejemaskinen er efterspændt.

! Kontroller oliemængden på motoren inden start. Se vedlagte guide

Start Motoren:

1. Åben for brændstofhanen.
2. Ved kold motor åben for chokeren.
Bemærk: Ved varm motor er brug af choker ikke nødvendigt.
3. Åben for fuld gas dvs. sæt gashåndtag på "start"
4. Træk forsigtigt i rekylstarteren, indtil der mærkes modstand. Træk derefter kraftigt i rekylstarteren for at starte motoren. Lad startsnoren forsigtigt glide tilbage i startposition.
5. Reguler chokeren, indtil motoren har en jævn motorgang.

Stop motoren:

1. Sæt gashåndtaget på minimum/stop.
2. Luk for brændstofhanen.

Gearskifter

Der kan vælges mellem 3 fremadgående gear og et bakgear. Se figur 10.

! Slip altid koblingshåndtaget inden skift af gear

Koblingsgreb A - Frem og Bak:

For at betjene det sorte håndtag A i figur 9, presses håndtaget ned, så fejemaskinen kører frem eller tilbage. For at skifte gear slippes koblingsgrebet og nyt gear vælges med gearomskifteren.

Vær opmærksom når der bakkes. Det er vigtigt at området bagtil er frit og ryddet for forhindringer før der bakkes. Bak aldrig fejemaskinen op mod en mur, et træ eller lignende solid forhindring.

Koblingsgreb B - Aktivering af børster:

Ved at betjene det sorte håndtag B i figur. 9, aktiveres børsterne.

Fejemaskinen er udstyret med "dødemandsreb", hvilket vil sige, at når grebene slippes standser børsterne og maskinen.

Betjenings sikkerhedszone.

Betjeningsområdet markeret i figur 11 må ikke forlades under driften. Hvis det under driften er nødvendigt at forlade sikkerhedszonen, for eksempel for at justere børstehøjden eller fastgøre tilbehør, stop da først motoren.

Højdejustering af børste

Når børsterne begynder at blive slidte, er det nødvendigt at efterjustere hvor tæt børsterne skal gå på underlaget. For at højdejustere kosten gør som vist i figur 7:

1. Fjern låsesplit
2. Løft maskinen så kosten går fri og træk støttehjul ud
3. Fjern eller tilføj afstandsring (1 ring = ca. 5 mm)
4. Isæt støttehjul, fjern/tilføj afstandsring, fastgør med låsesplit.
(Tip: Færdiggør et hjul af gangen)

Vinkeljustering af børste

Kosten kan drejes 20 grader til hver side. Dette gøres ved, at man trykker svingrøret på fejekosten ned, drejer kosten og slipper håndtaget, så palen falder i hak. Svingrøret er vist på figur 6, H.

Tekniske specifikationer

Model	SLW610
Totalbredde (mm)	610
Arbejdsbredde (mm)	600
Tør vægt (kg)	72,5
Børstediameter (mm)	350
Svingbar kost (positioner)	3
Gear (frem/bak)	3+1
Dækstørrelse	13 x 4.10
Dæktryk (psi)	24

Fejlfinding

Problem Løsning

Motoren starter ikke:

1. Kontroller gnist i tændrør.
2. Kontroller tændrørshætten er monteret korrekt.
3. Kontroller om motoren er udstyret med en tændingskontakt.
(Denne skal være aktiveret).
4. Kontroller om motoren er udstyret med en brændstofhane.
(Denne skal være aktiveret.)

Motoren har en ujævn motorgang:

1. Kontroller at chokeren er slæet fra.
2. Kontroller brændstoffet for urenheder.

Børsterne vil ikke køre:

1. Kontroller at koblingen er justeret korrekt.
2. Kontroller at remmen er stram.

Maskinen vil ikke køre:

1. Kontroller at koblingen er justeret korrekt.
2. Kontroller remmen.

Maskinen fejer ikke ordentligt:

1. Kontroller afstanden fra børsten til underlaget.

GB - Original instructions

Congratulations on purchasing your new sweeper. Please read this instruction manual carefully, especially the safety warnings marked with the symbol:



Table of contents

Illustrations	2
Table of contents.....	10
Safety precautions	10
Miscellaneous.....	11
Box Contents.....	11
Identification of parts	11
Assembly.....	12
Operation.....	12
Operation safety zone	12
Height adjustment of brush	12
Angle adjustment of brush	12
Technical specifications	13
Troubleshooting	13

Spare parts

Spare part drawings for the specific product can be found on our website www.texas.dk
If you find the part numbers yourself, this will facilitate more rapid service.

For purchase of spare parts, please contact your dealer.
You will find a list of dealers on the Texas website.

Accessories for SLW610 (figure 12):

Collector box:	90228000100
Snow scraper:	90228500100
Snow chain:	90228700100
Sold separately!	

Safety precautions

Setup

- ⚠ Do not put hands or feet near or under rotating parts.
- ⚠ Read this manual carefully. Make sure that you are familiar with the different controls, settings and handles of the equipment.
- ⚠ Know how to stop the.
- ⚠ Never allow children or people unfamiliar with these instructions to use the machine. Note, that local regulations can restrict the age of the operator.
- ⚠ If you feel unwell, tired or have consumed alcohol or drugs, do not operate the machine.
- ⚠ Always inspect the machine before usage. Ensure that no parts are worn or damaged.
- ⚠ Replace worn out or damaged elements and bolts in sets to preserve balance.

⚠ The operator of the machine is responsible for people's safety.

⚠ Never use the machine near children or animals.

⚠ The operator of the machine is held liable for any accidents or hazards to other people and their property.

⚠ Thoroughly inspect the area, where the equipment is to be used, if necessary remove any foreign objects.

⚠ Do not refuel gasoline indoors or while the engine is running.

⚠ Spilled gasoline is extremely flammable, never refuel while the engine is still hot.

⚠ Wipe off any spilled gasoline before starting the engine. It may cause a fire or explosion!

⚠ Beware of hazards, while working on difficult soil hence; extremely stony or hard soil.

⚠ Boots with non-slip soles with steel jacket is required. Avoid loose-fitting clothes.

Operation

⚠ Always start the engine from safety zone.

⚠ Do not leave the safety zone while operating the machine, if it is necessary to leave the safety zone, turn off the engine before leaving the zone.

⚠ After striking a foreign object, stop the engine immediately, remove the spark plug cap and inspect the machine thoroughly for damage. Repair the damage before continuing

⚠ If the machine should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of damage.

⚠ Always disengage the levers, turn off the engine, and remove the spark plug, when the unit is left unattended.

⚠ Always turn off the engine and ensure that all moving parts have come to a complete stop before making any repairs, adjustments, or inspections.

⚠ Exercise extreme caution when operating on slopes.

⚠ Never operate the machine at a fast pace.

⚠ Do not overload machine capacity by attempting to work at too fast a rate.

⚠ Do not carry passengers.

⚠ Pay attention, while the machine is in reverse.

⚠ Never allow any bystanders in front of unit.

⚠ Always disengage the rotary brush, if not in use.

⚠ Only operate the machine at daylight or in fully illuminated areas

⚠ Ensure a stable foothold and always keep a firm hold on the handles. Always walk, never run.

- ⚠** Do not operate the equipment when barefoot or wearing sandals.
- ⚠** Exercise extreme caution when changing direction on slopes.
- ⚠** By rear tillers, ensure that the blades are protected by safety shield, only the part of the blades that works into the soil must be free.
- ⚠** Never attempt to make any adjustments, while the engine is running.
- ⚠** Use extreme caution when reversing or pulling the machine backwards
- ⚠** Never operate the engine indoor or in areas with low ventilation. The exhaustion from the engine contains carbon monoxide. Failure to observe could result in permanent injury or death.

Gasoline safety

- ⚠** Use extreme care in handling gasoline. Gasoline is extremely flammable and the fumes are explosive.
- ⚠** Serious personal injury can occur, when gasoline is spilled on yourself or your clothes. Rinse your skin and change clothes immediately!
- ⚠** Use only an approved gasoline container. Do not use soft drink bottle or similar!
- ⚠** Extinguish all cigarettes, cigars, pipes and other sources of ignition.
- ⚠** Never refuel your machine indoors.
- ⚠** Let the engine cool down before refilling
- ⚠** Never fill the fuel tank to more than 2.5 cm below bottom of filler in order to provide space for fuel to expansion.
- ⚠** After refueling, ensure that the cap tightens securely.
- ⚠** Never use the lock-function on the gasoline gun, when refueling.
- ⚠** Do not smoke while refueling.
- ⚠** Never refuel inside a building or where gasoline fumes may get in contact with an ignition source.
- ⚠** Keep gasoline and engine away from appliance, pilot lights, barbecues, electric appliances, power tools, etc.
- ⚠** If the fuel tank has to be drained, this shall be done outdoors

Maintenance and storage

- ⚠** The engine shall be stopped when carrying out maintenance and cleaning operations, when changing tools and when being transported by means other than under its own power.
- ⚠** Check regularly that all bolts and nuts are tightened. Retighten if necessary.
- ⚠** The engine must be completely cooled before storing indoors or covered.
- ⚠** If the machine unused for a period of time, please refer to the instructions in this manual.
- ⚠** Maintain or replace safety and instruction labels, as necessary.
- ⚠** Only use original spare parts or accessories. If not original parts or accessories is used, the liability is no longer applied.
- ⚠** Replace faulty silencers.

Miscellaneous

- ⚠** The gears are delivered pre-greased. However, always ensure they are well greased before each use.
- ⚠** The motor is not pre-filled with oil.
- ⚠** Factory-fitted control devices, such as the handle-mounted clutch cable, must not be removed or exposed.
- ⚠** Only drain the fuel tank outdoors. Gasoline is extremely flammable and the fumes are explosive.
- ⚠** Ensure that the machine is properly secured when transported on a flatbed etc.
- ⚠** Reduce the throttle during engine shutdown and close the fuel valve.

Box Contents

Figure 1:

- A. Machine
- B. Handle bar
- C. Gear shifter
- D. Swing handle
- E. Engine manual and user's manual

Identification of parts

Figure 2:

- A. Brush
- B. Support wheel for brush / adjustment of height
- C. Wheels
- D. Handle bar
- E. Clutch handle - Forward and reverse speed
- F. Clutch handle - Activating brush
- G. Gear shifter
- H. Swing handle
- I. Engine (may vary from picture)
- J. Belt guard

Assembly

The sweeper is almost ready assembled from the factory. Only a few items remain to be assembled:

Actual model may vary from the illustration shown

Check the tire pressure on both wheels before use. Correct tire pressure is 24 psi/1.7 bar. Fig 8.



Handy Sweep - all models

1. Remove the bolts from the base unit then mount the handle bar and fix the bolts See figure 3.
2. Mount the gear shifter rod to the bracket as shown in figure 4.
3. Pull the cables up to the clutch handles. Separate the metal parts by turning them apart. Mount the part with the hook onto the clutch handle. Assemble the 2 metal parts and turn it until the cable is tight. See figure 5.
4. Mount swing handle with enclosed bolt and nut. Figure 6.

Operation



Before using the machine, remove bigger objects from the vicinity. Bigger objects can damage the sweeper. Also check that all bolts are tightened.



Start the engine:

1. Open the fuel tap.
2. On a cold engine open the choker. Note: By a hot engine choke is not required.
3. Turn the throttle cable to "start" position.
4. Pull the recoil starter gently until you feel resistance in the rope. Then pull quickly and energetic. Do not at any time let go of the recoil starter but glide it gently back and pull again.
5. Regulate the choker until the engine is running smoothly.

Stop the engine:

1. Set the throttle to minimum/stop.
2. Turn the fuel tap to the "off" position.

Gear shifter

3 different forward gears and 1 reverse gear can be selected. See figure 10.



Clutch handle A - Forward and Reverse.

To operate the black clutch handle A in figure 9, activate the handle, so the sweeper will drive forward or backwards. To change gear, release the clutch handle and chose the desired gear with the gear shifter.

Pay attention while reversing. It is important that the area is cleared, for any obstacle before reversing. Never reverse the sweeper against a wall, tree or any other fixed obstacle.

Clutch handle B - Activation of brush.

To operate the black brush handle B in figure 9, push down the handle and it activates the brush.

The sweeper is equipped with a "dead man's handle", once released the brush and drive will stop immediately.

Operation safety zone

Do not leave the operation safety zone marked in figure 11, while working with the machine. If it is necessary to leave the operation zone, for example to readjust the rotary brush or to attach an accessory, first stop the engine.

Height adjustment of brush

When the brushes become worn it might be necessary to adjust the proximity of brushes to the working surface. To adjust the height of the brushes follow figure 7:

1. Remove the lock pin
2. Lift the front of the machine to free the brush and pull the supporting wheels out.
3. Remove or add the spacer ring (1 ring = approx. 5 mm)
4. Install support wheels, remove / add spacer ring, fasten with locking pin.
(Hint: Complete one wheel at a time)

Angle adjustment of brush

The brush can be pivoted 20 degrees to either side. This is done by pushing the swing handle down, turning the brush and releases the handle so the detent clicks into place.

The swing handle is shown on Figure 6, H.

Technical specifications

Model	SLW610
Total width (mm)	610
Working width (mm)	600
Weight w/o fuel (kg)	72.5
Brush diameter (mm)	350
Swinging brush (positions)	3
Gears (forward/reverse)	3+1
Tire size	13 x 4.10
Tire pressure (psi)	24

Troubleshooting

Problem Solution

The engine won't start:

1. Check sparkplug.
2. Check that the spark plug cap is fitted correctly.
3. Check if the motor is equipped with an ignition switch.
(It must be activated)
4. Check if the motor is equipped with a fuel valve.
(It must be activated)

The engine runs unevenly:

1. Check that the choke has been released.
2. Check fuel for impurities.

If the brush will not run:

1. Check that the clutch is adjusted correctly.
2. Check that the belt is tight.

If the machine will not run:

1. Check that the clutch is adjusted correctly.
2. Check the belt.

If the machine does not sweep effectively:

1. Check the distance between the brush and working surface.



EU-importør • EU-importer •

Texas Andreas Petersen A/S

Erklærer herved at materiel • Hereby certifies that the following •

Fejemaskine • Sweeper •

Selekta SLW 610

Er fremstillet i overensstemmelse med følgende direktiver • Is in compliance with the specifications of the machine directive and subsequent modifications •

2006/42/EC - 2006/95/EC - 2004/108/EC

Overensstemmelsesvurdering procedure i henhold til bilag III/VI • Conformity assessment procedure according to Annex III/VI •

2000/14/EC amended by 2005/88/EC

Materiellet er udført i overensstemmelse med følgende standarder • Conforms with the following standards •

EN 709: 1997+A4,

LPA: 83,69 dB(A) ah = 3,05 m/s² K = 1.5 m/s²

LWA: 99 dB(A) K = 2,23 dB(A)

Serial numbers: 1404016910000 → 1604016999999

Texas Andreas Petersen A/S
Knullen 22 • DK-5260 Odense S

Responsible for documentation
Johnny Lolk

02.06.2014

Verner Hansen
Managing Director •